

## SD-10G AERO

Procedure for programming a Sick Switch for Start-Stop operation of the Timer function of the SD-10G Transmitter.

Select **SYSTEM** using the Navigation Pad. Press **ENTER**.  
Scroll down using the Navigation Pad and highlight **TIMER**. Press **ENTER**.  
Highlight **Stop Watch** and press **ENTER**.  
Set your desired **Minutes** and **Seconds** using Navigation Pad and the YES/+ key.  
Press the **END** key three times.

Highlight **SYSTEM** and press the **ENTER** key.  
Scroll down using the Navigation Pad to **SWitch ASSIGN**. Press **ENTER**.  
Scroll down to **START**. Use the YES/+ key to set **START** to **S1** and set **STOP** to **S2**.  
Press the **END** key twice. Press the **ENTER** key to access the **SYSTEM** menu.  
Scroll down to **STICK SWITCH** and press the **ENTER** key.

### STICK SWITCH >1

Set **STICK >TH** using the Navigation Pad and Yes/+ key. Move the **THROTTLE STICK** to a high throttle position so **STICK** reads **56%**. Highlight **POINT**. Press the YES/+ key to make it read **POINT > -56%**. This is the **ON** point for the Timer. The display will indicate:

<b>STICK &gt;TH</b>	<b>STICK</b>
<b>POINT &gt;56%</b>	<b>56%</b>
<b>ON &gt;H</b>	<b>SW</b>
<b>SOUND&gt;INH</b>	<b>ON</b>

Move the **THROTTLE STICK** down to the extreme **Low Throttle** position, and move the cursor down to **ON>H**. If it does not read **ON>H**, press the YES/+ key to change it. The display will then indicate:

<b>STICK &gt;TH</b>	<b>STICK</b>
<b>POINT &gt;56%</b>	<b>-100%</b>
<b>ON &gt;H</b>	<b>SW</b>
<b>SOUND &gt;INH</b>	<b>OFF</b>

Use the Navigation Pad and the YES/+ key to select **STICK SWITCH 2**. With the **THROTTLE STICK** the in the Extreme **LOW** throttle position, scroll down and set **POINT -100%** using the YES/+ key and display reads **ON >L**. The display should then indicate:

<b>STICK &gt;TH</b>	<b>STICK</b>
<b>POINT &gt;-100%</b>	<b>-100%</b>
<b>ON &gt;L</b>	<b>SW</b>
<b>SOUND &gt;INH</b>	<b>ON</b>

Press the **END** key twice to return to the main display.

Your Timer Minutes and Seconds are shown on the **LCD Display**.

When you move the **THROTTLE STICK** above **56%** The **Timer** will start. When you move it to the **LOW Throttle** position the Timer will stop. When the Timer counts down and reaches 10 seconds it will sound a note at each second and a final note when it reaches zero seconds and begins counting up. After the completion of your flight press the YES/+ and NO/- keys simultaneously to reset the time to your start time.

Jack R. Albrecht  
Airtronics Technical Support  
Revised 17 August 2009